



IMPORTANT INSTRUCTIONS

For Installation LS265LED TRISTAR: UNDERWATER

Warning: The Luminaire should only be used complete with its protective shield (cover)

Lumascap Lighting Industries Pty Ltd
38-44 Enterprise Street, Cleveland, QLD 4163, Australia
PO Box 1875, Cleveland D.C., QLD 4163, Australia
T 07 3286 2299
F 07 3286 6599
E sales@lumascap.com.au
W www.lumascap.com.au

WARNING

If cable damaged replace with cable supplied by LUMASCAPE only.

DO NOT SHORTEN, INTERFERE OR DISCONNECT CABLE FROM FITTING. WARRANTY WILL BE VOID IF CABLE ASSEMBLY IS TAMPERED WITH.

Caution: Not for use on Combustible Surfaces. Mount only on Brick, Concrete, or Metal mounting surface

1 INSTALLATION - LS265LED TRISTAR

THIS FIXTURE MUST BE FULLY SUBMERSED BEFORE LIGHTING, FAILURE TO DO SO WILL OVERHEAT FIXTURE!

1. Fixture is factory sealed. Do not remove cover.
2. Mount Securing Bracket using a suitable non-corrosive fastener. The body bracket may be removed by removing one dome nut and the threaded bar to ease tightening of the fastener. One 8mm (5/16") Stainless Steel Masonry Anchor is recommended for concrete mounting.
2. **Important:** Ensure that there will be at least 50mm of water below the base of the fixture to allow water circulation. Failure to do so can result in fixture overheating.
2. Reattach body bracket to securing bracket if required, and then finger tighten dome nuts.
3. Run the cable out and connect to a suitable DMX controller and source of supply.
5. Do not loose joint the cable under water. Joint should either be in an approved enclosure or out of the water.
6. Ensure that the supply voltage is 12 volts before switching on.
7. **Important:** Ensure that the fixture is fully submerged in water before switching on.

2 WIRING CHART

Conductor Colour	Designation
Black	Power negative
White	Power positive
Red	Red signal
Green	Green signal
Blue	Blue signal
Orange	Common signal

**PLEASE ENSURE THAT
INSTALLATION COMPLIES WITH
LOCAL AUTHORITY STANDARDS**

www.lumascap.com.au