



**WARNING**

Install in accordance with National Electric Code, ANSI/NFPA 70 or the Canadian Electrical Code, Part I (CEC), CSA C22.1




LS1010

**READ ALL SAFETY INSTRUCTIONS FIRST**


- › Follow instructions carefully, failure to do so will void warranty.
- › Ensure installation complies with local law and applicable standards.
- › Input voltage is 120-277 V AC, 50/60 Hz
- › Only use Lumascape power supply, control equipment and leader cables.
- › Ensure mains input power is surge protected.
- › Never make connections whilst the power is connected.
- › Do not make modifications or alter the product.
- › Keep luminaire and connections clean and free of debris and moisture.
- › It is the installers responsibility that the installation is adequately sealed to avoid moisture ingress.

## Open Luminaire

Loosen the four screws and remove the lid and open the luminaire.


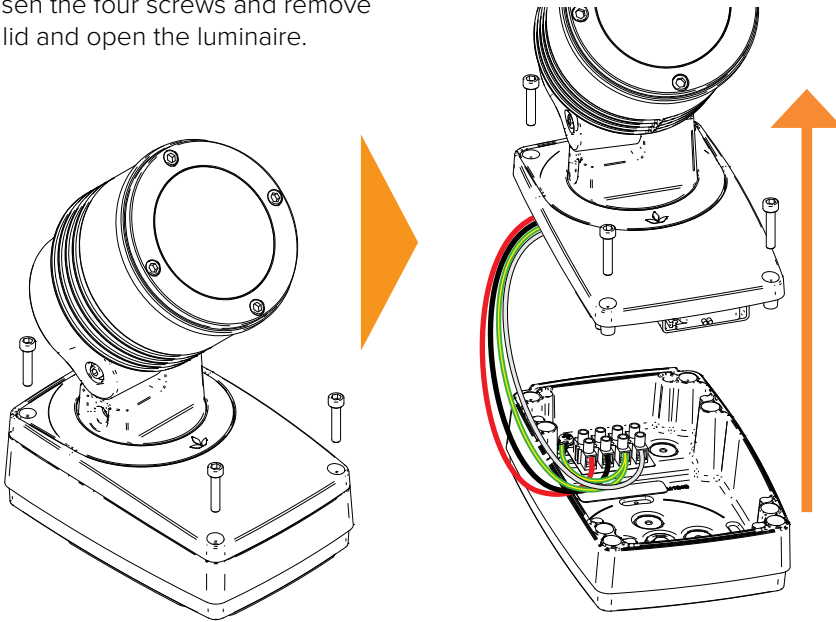


In the base drill out gland holes as required.

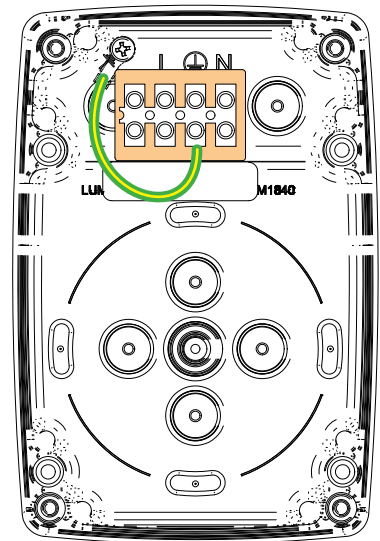


## Install Gland

Drill the hole for the gland.  
Use a 16mm drill bit to drill the gland hole.

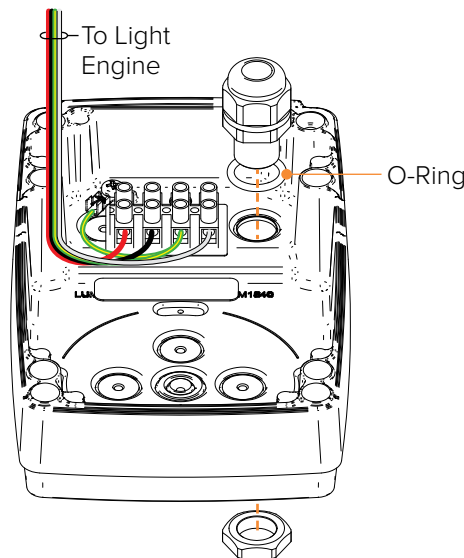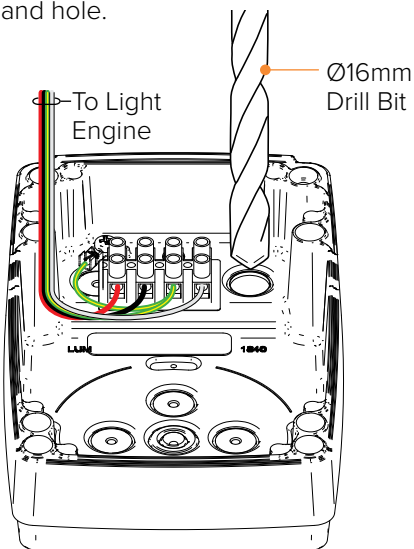

Feed supply cable through gland and tighten. Outer diameter of cable should be Ø5-10mm

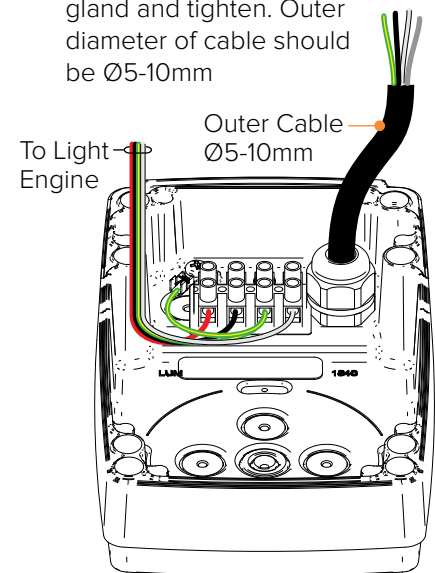


## Connect Supply Cable

To Light Engine


| Colour | Designation |
|--------|-------------|
| White  | Neutral     |
| Green  | Earth       |
| Black  | Active      |
| Red    | Data        |

Connect the supply cable to the terminal block. Refer to table below for conductor colour and designation.

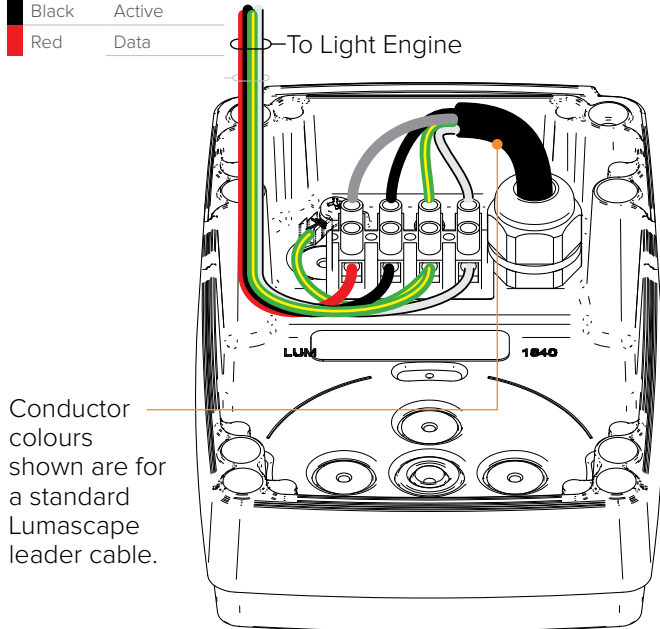


## Mount Base to Wall

Bolt luminaire to mounting surface making sure the gasket seal is inserted between the mounting surface and the wall.

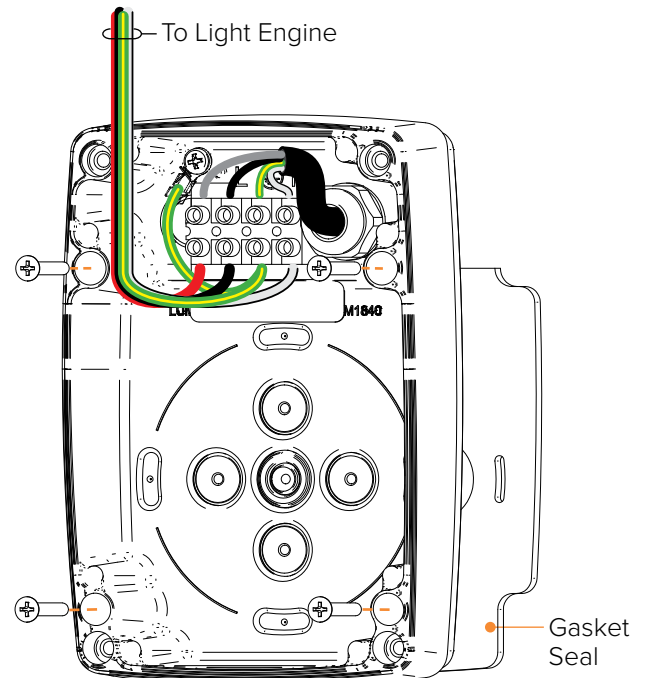

## Close Luminaire

Re-attach lid to base, making sure the seal is correctly placed between the two components.

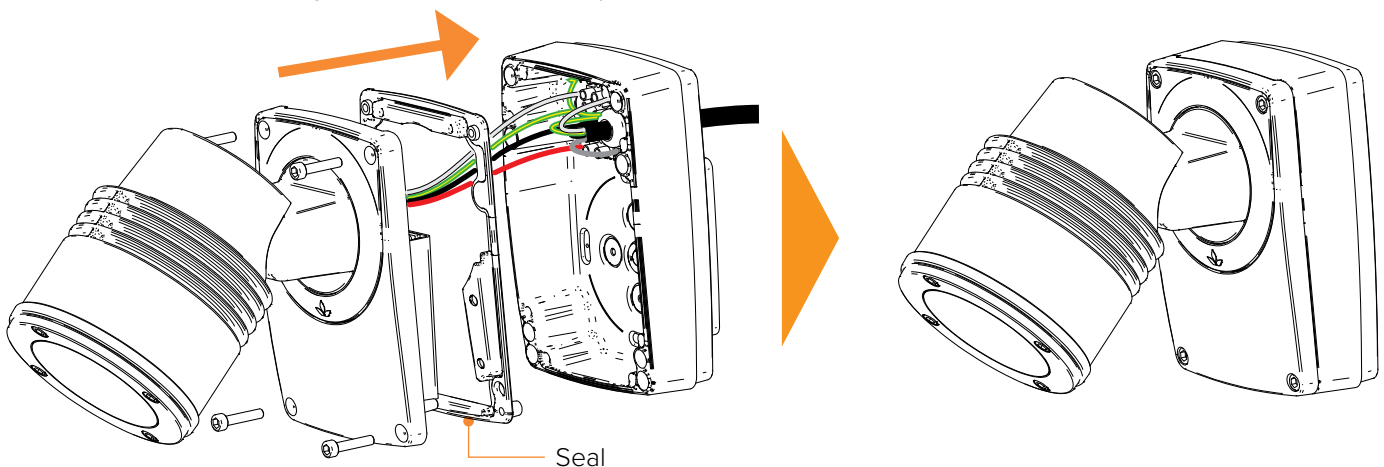

## Aim Luminaire

Using an Allen key adjust the luminaire's tilt and rotation.  
Loosen the screws to adjust and tighten to lock luminaire into place.

