IMPORTANT INSTRUCTIONS



For Installation LS363

MODELS


LS363 Groundmount



WARNING


DO NOT SHORTEN, INTERFERE OR DISCONNECT CABLE FROM FITTING. WARRANTY WILL BE VOID IF CABLE ASSEMBLY IS TAMPERED WITH.

CAUTION - HOT BULBS. Keep Away From Curtains And Other Combustible Material.

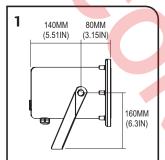


Locate Fixtures

Site fixture in proximity to cabling. Use discretion in locating fixtures as glass can become very hot and may burn.

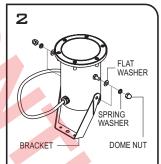

Mount Bracket to Fixture

Mount bracket supplied to fixture using the M10 dome nuts and washers as shown above.

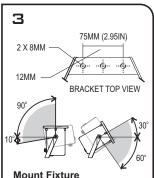

Mount fixture to secure surface. Orientate fixture as required and tighten nuts on bracket



LUMASCAPE USA INC.

US Head Office 1300 Industrial Rd., Unit #19 San Carlos, CA 94070 USA


Telephone 1-(650)-595-LUMA(5862)

Fax 1-(650)-595-5820

www.lumascape.com

Free Call 1-866-695-LUMA(5862)

(US & Canada)

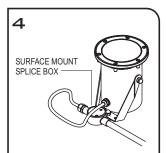

Connect Supply

Mount Junction Box, if supplied, to the mounting surface. Connect fixture to supply cable according to local wiring rules.



Insert Lamp

Insert PL lamp into lampholder mounted on gear tray in bottom of fixture. Insert reflector, locating bottom into aluminium cup around lampholder.



Insert Lamp

Screw PAR38, or PAR30 lamp into lampholder mounted on gear tray in bottom of fixture. Ensure the lamp bottoms out in lampholder.


5C MR16 LAMPS



Insert Lamp

Remove Hood and louvre from gimbal and insert MR16 lamp into lampholder. Replace hood and louvre.

5D MR16 LAMPS

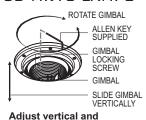

rotational position of gimbal

Rotate gimbal to aim light at target. Slide gimbal vertically to minimise glare. Once positioned tighten locking screw using Allen Key provided.

5E MR16 LAMPS



Adjust angular position of light

Aim the light at target by rotating the angle adjust screw, with the Allen Key provided. The lamp has a maximum adjust of 20° either side of vertical.



MPORTANT INSTRUCTIONS

For Installation LS363

MODELS

LS363 Groundmount





Test Fixture

 
Test to ensure fixture is operational. Allow to burn uncovered for 30 minutes to allow any moisture in fixture to evaporate.



Reseal Fixture

Locate lid, complete with any accessories, on fixture aligning screws with clinch nuts in flange. Tighten screws with Allen Key provided.

RE-LAMPING



Open / Re-lamp / Reseal

Ensure fixture is isolated from mains power. Unscrew lid using Allen Key provided, or a 3mm Allen Key. Remove any louvres or reflectors. Replace lamp and Reseal Fixture.

LUMASCAPE USA INC.

US Head Office 1300 Industrial Rd., Unit #19 San Carlos, CA 94070

Telephone 1-(650)-595-LUMA(5862)


Fax 1-(650)-595-5820

www.lumascape.com

Free Call 1-866-695-LUMA(5862)


(US & Canada)

LAMP SOURCE CONVERSION INSTRUCTION

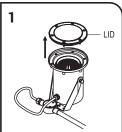

Isolate and **Open Fixture**

Ensure fixture is electrically isolated. Unscrew lid using a 3mm Allen key (provided) and remove.

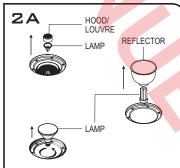

Remove Lamp

Remove any reflectors or louvres. Unscrew/Pull lamp from lampholder and remove.



Remove Gimbal

Loosen gimbal locking screw with 3mm Allen key, (provided). Remove gimbal and place beside fixture.



Remove Gear Tray

Unclip and remove gear tray, gripping via either the two finger recesses or the lampholder.



Install new gear tray by clipping into fixture, aligning large clip on can with large recess on gear tray as shown. Push down gently untill clips spring over tray.



Test and Reseal

Test and reseal fixture according to installations 4 to 6 on this sheet.

IMPORTANT SAFETY INSTRUCTIONS

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS

WARNING - To reduce the risk of FIRE or INJURY:

- Turn Off and allow to cool before replacing lamp.
- Lamp gets hot quickly! Contact only switch/plug when turning on.
- Do not touch hot lens, guard, or enclosure.

Fixture

SAVE THESE INSTRUCTIONS.

- Keep lamp away from materials that may burn.
- Do not touch the lamp at any time. Use a soft cloth. Oil from skin may damage lamp.